



122: PLYWOOD DECK-TO-WALL STATIC JOINT

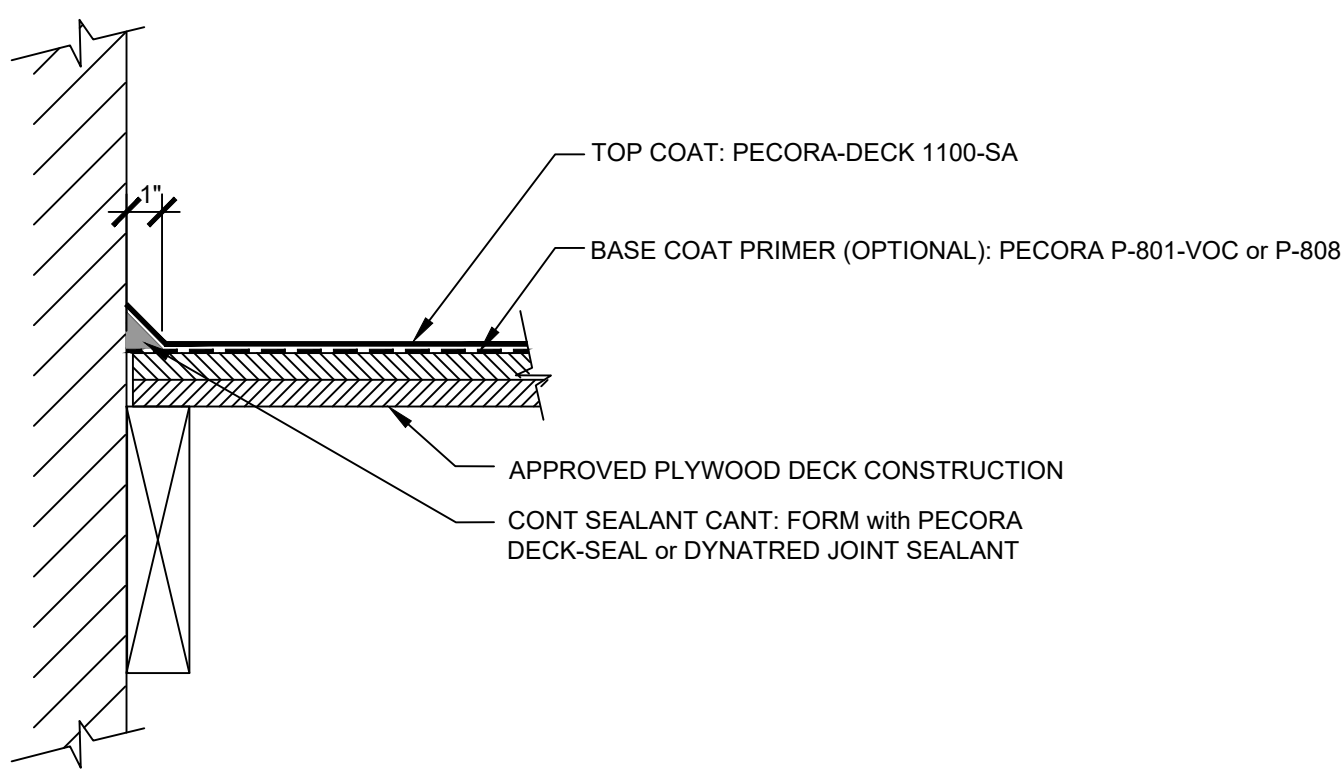


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

122C: PLYWOOD STAIR TREATMENT

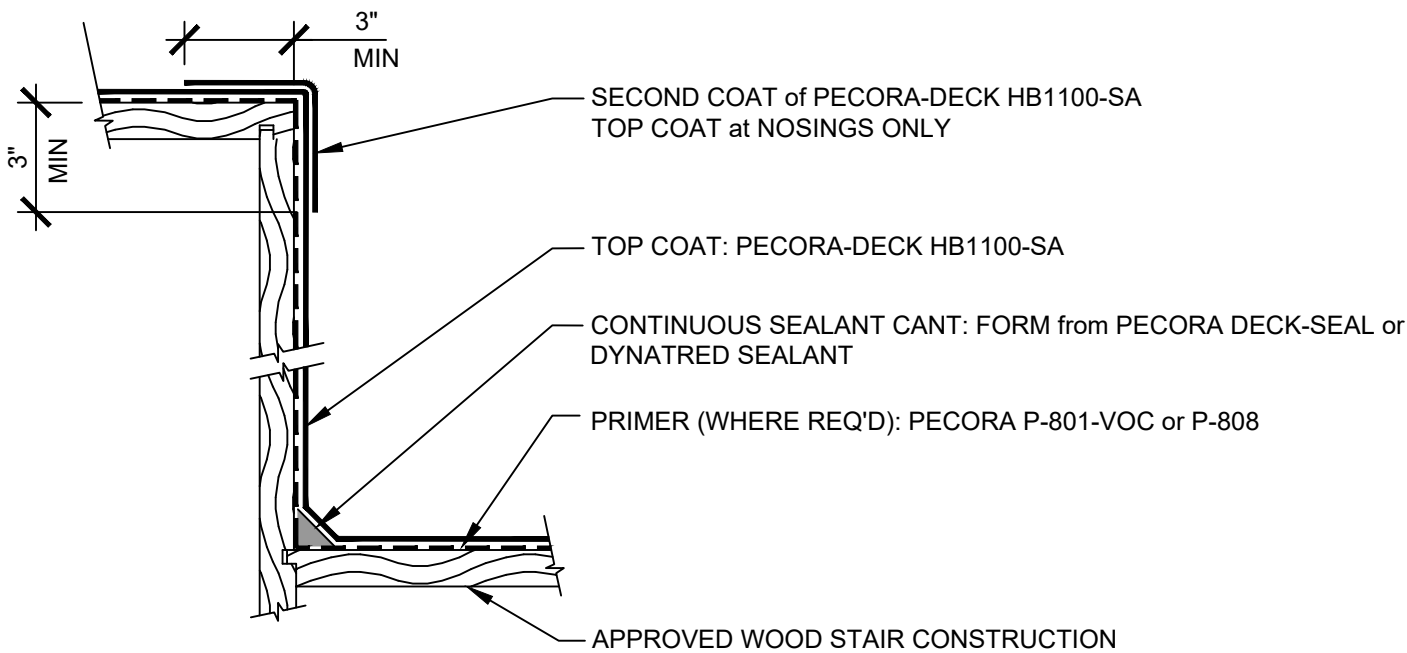


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

123A: PLYWOOD DECK-TO-DECK JOINT

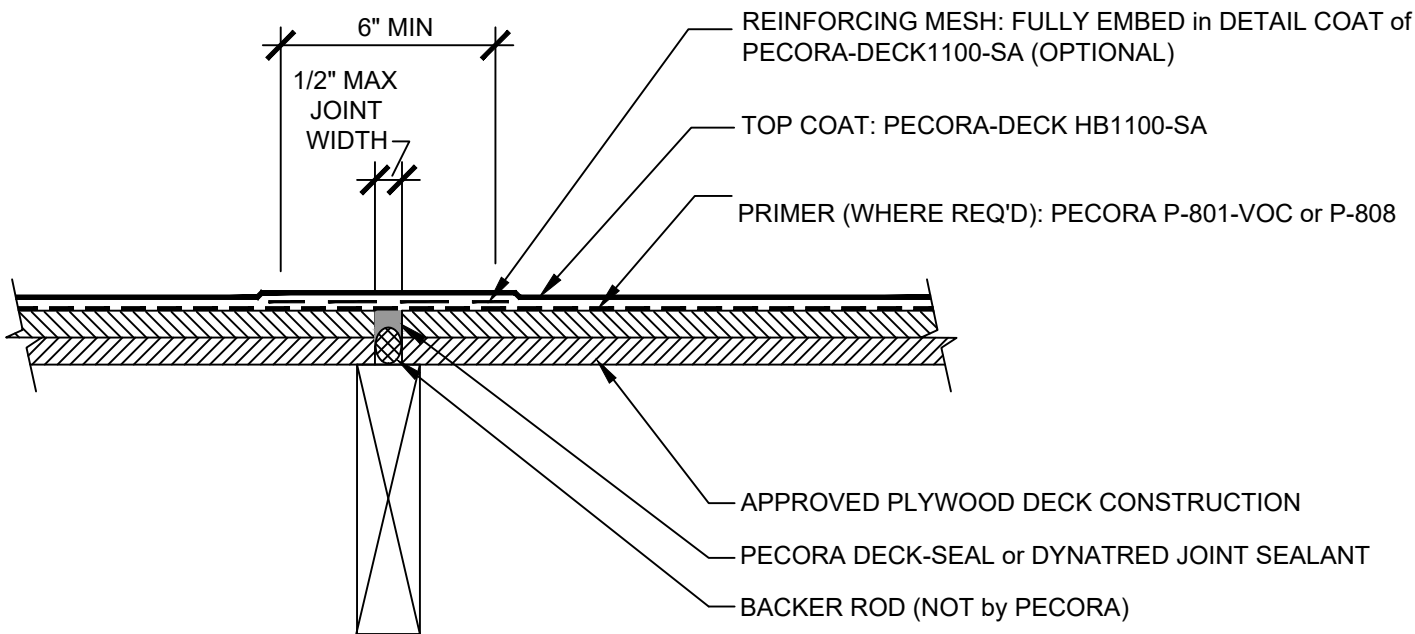


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

122A: PLYWOOD DECK FLASHING TIE-IN

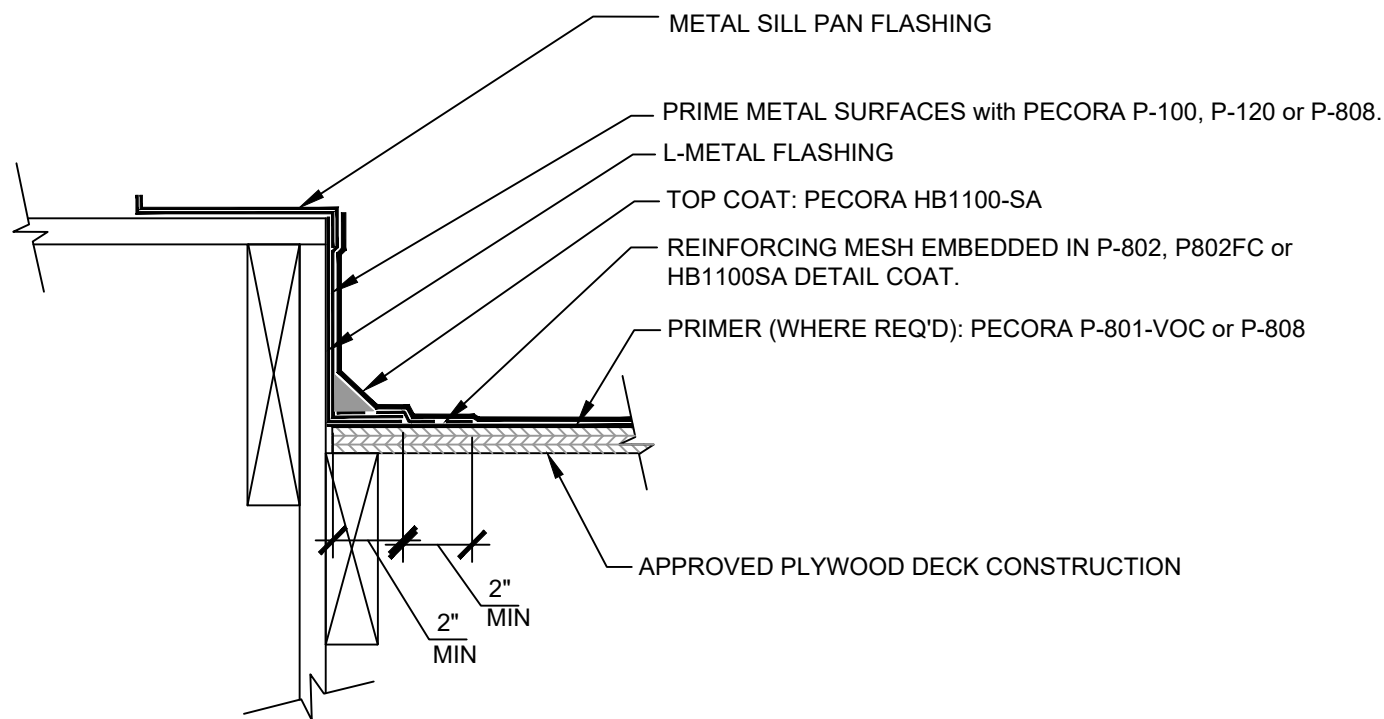


NOTES:
SEAL SHEET METAL LAPS with PECORA DECK-SEAL SEALANT.
PRIME METAL SURFACES with P-100, P-120 or P-808 PRIMER.
SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

123: PLYWOOD DECK-TO-DECK JOINT

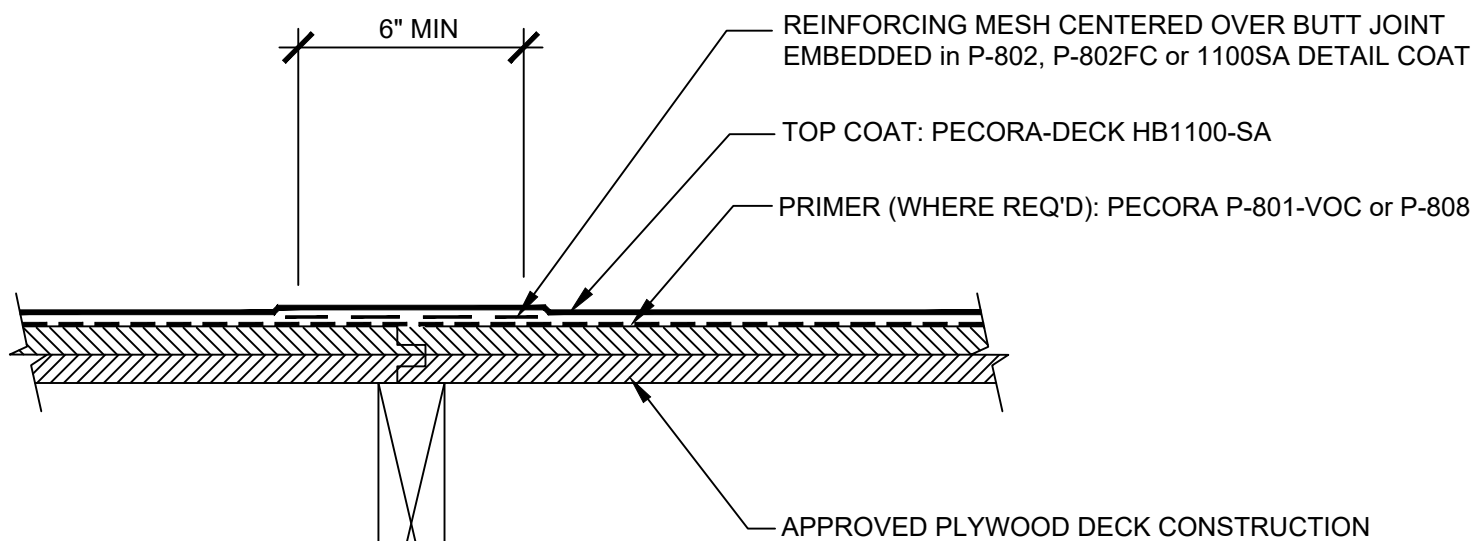

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

123B: PLYWOOD DRIP EDGE

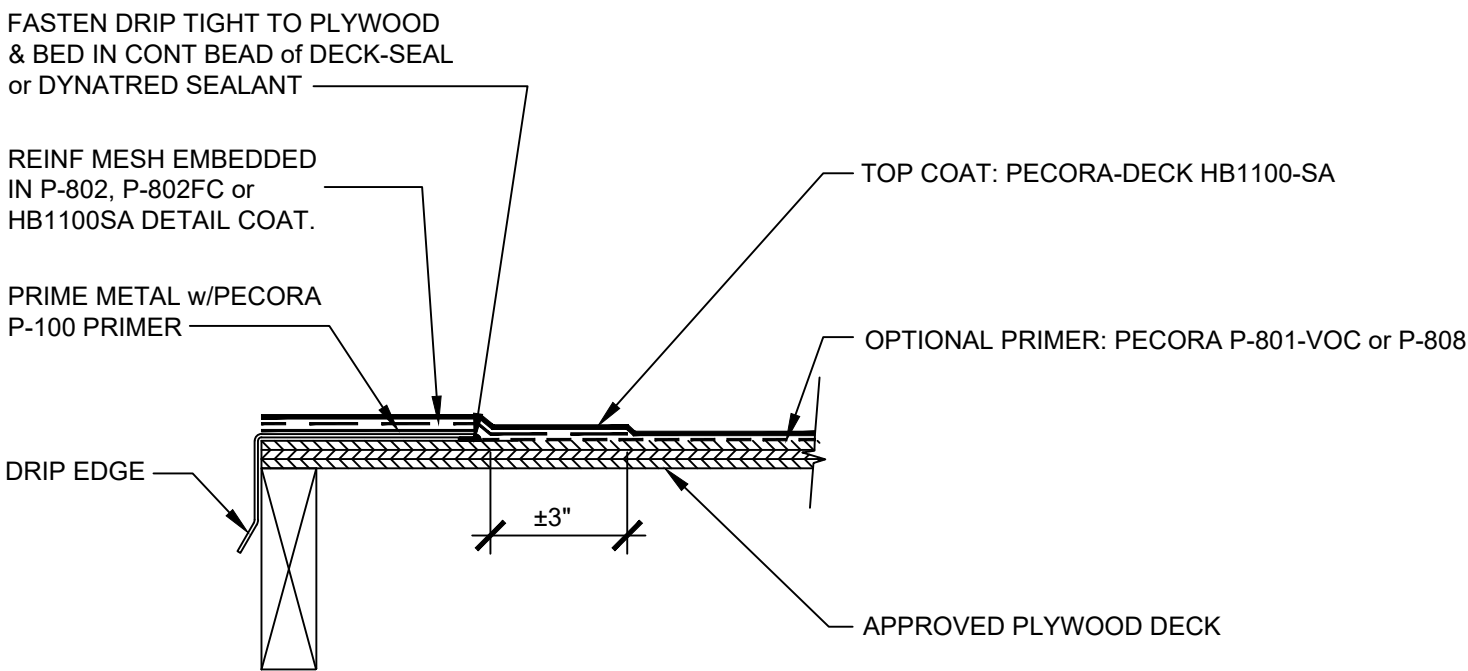

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

NOTE:
1. SEE HB1100SA TRAINING MANUAL for SYSTEM COAT & COATING THICKNESSES and INSTALLATION INSTRUCTIONS.
2. SEAL SHEET METAL LAPS WITH PECORA DECK-SEAL SEALANT.