



118: THICK-FLANGED DOUBLE TEE EDGE

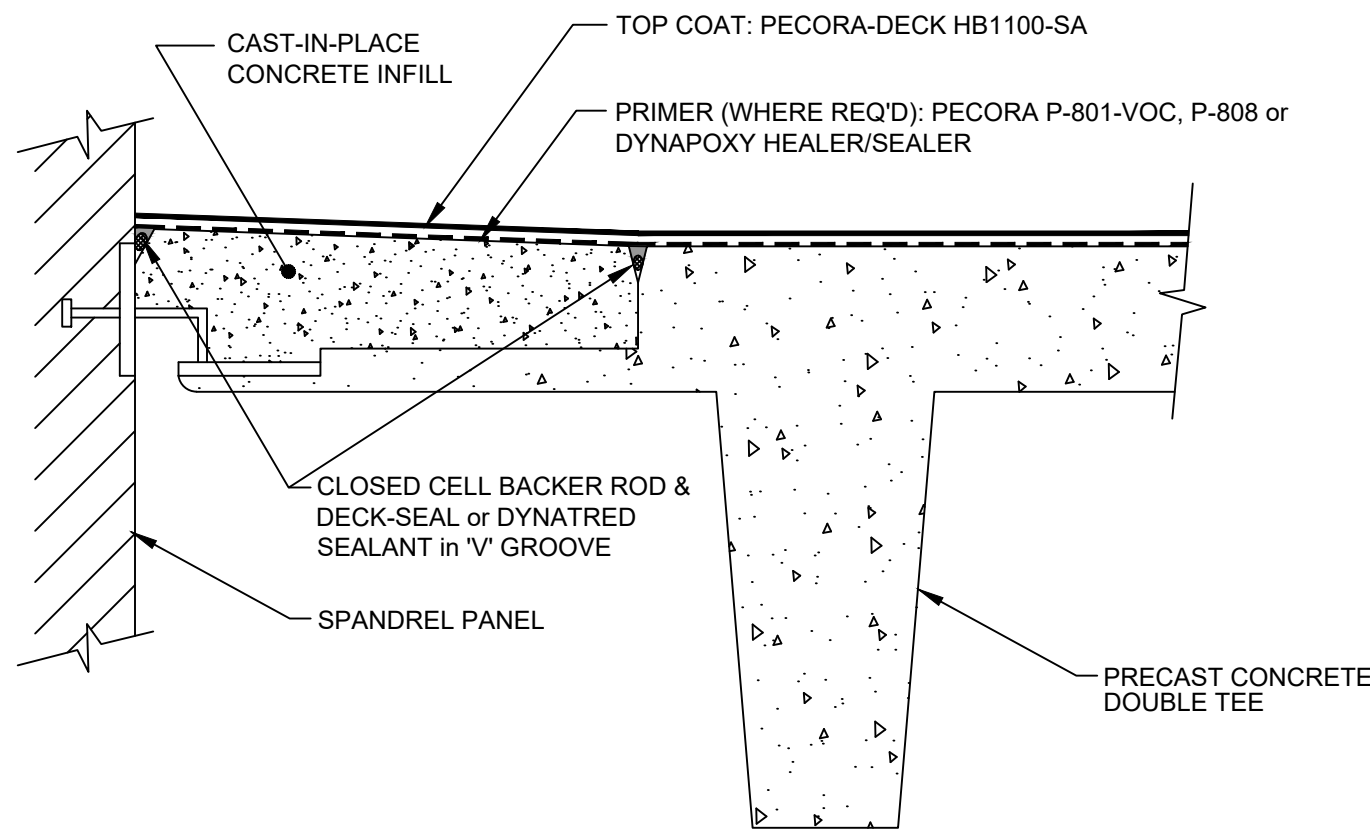


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

120: TOPPED THIN-FLANGE DOUBLE TEE EDGE

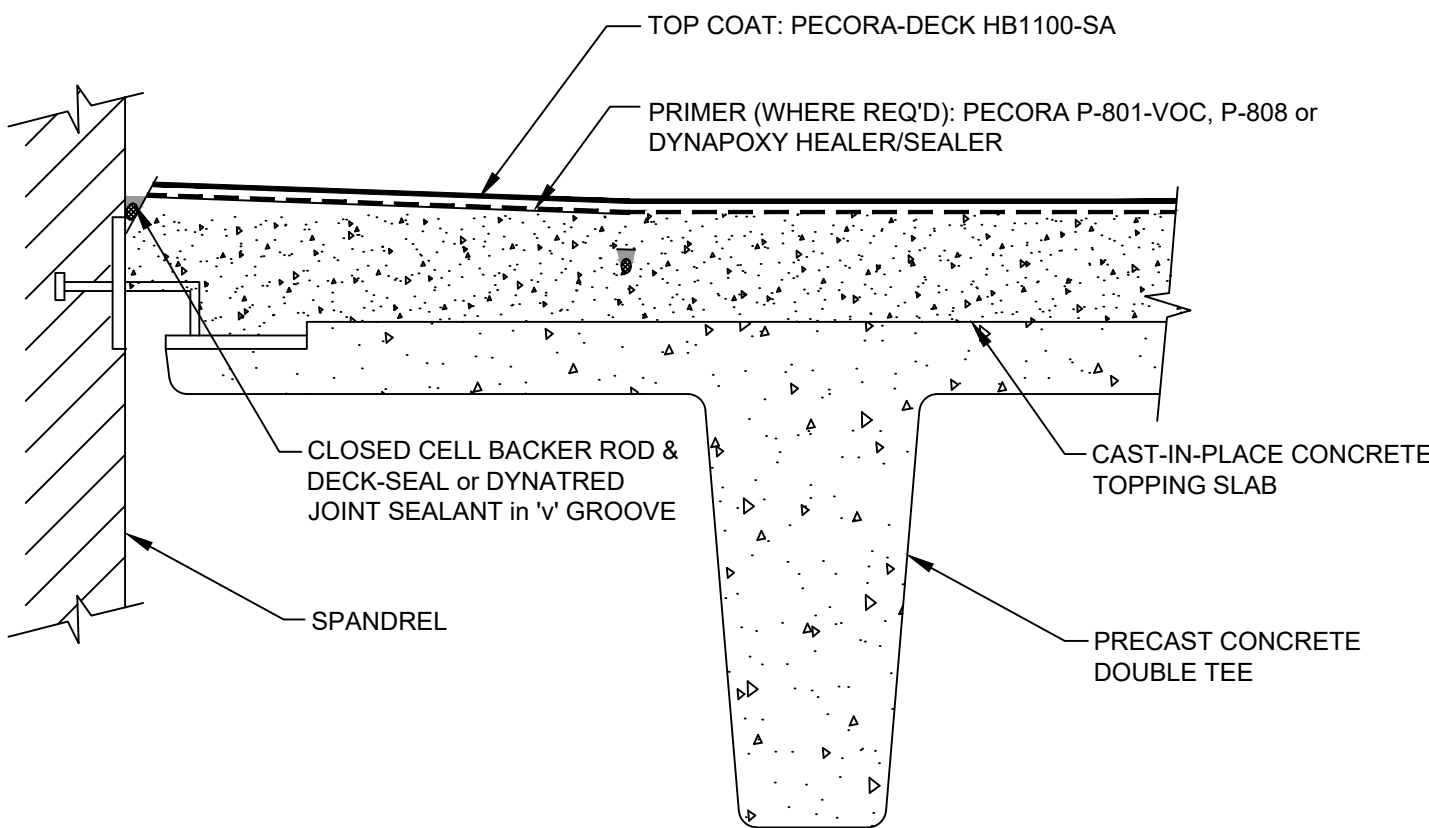


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

112: PARKING BUMPER

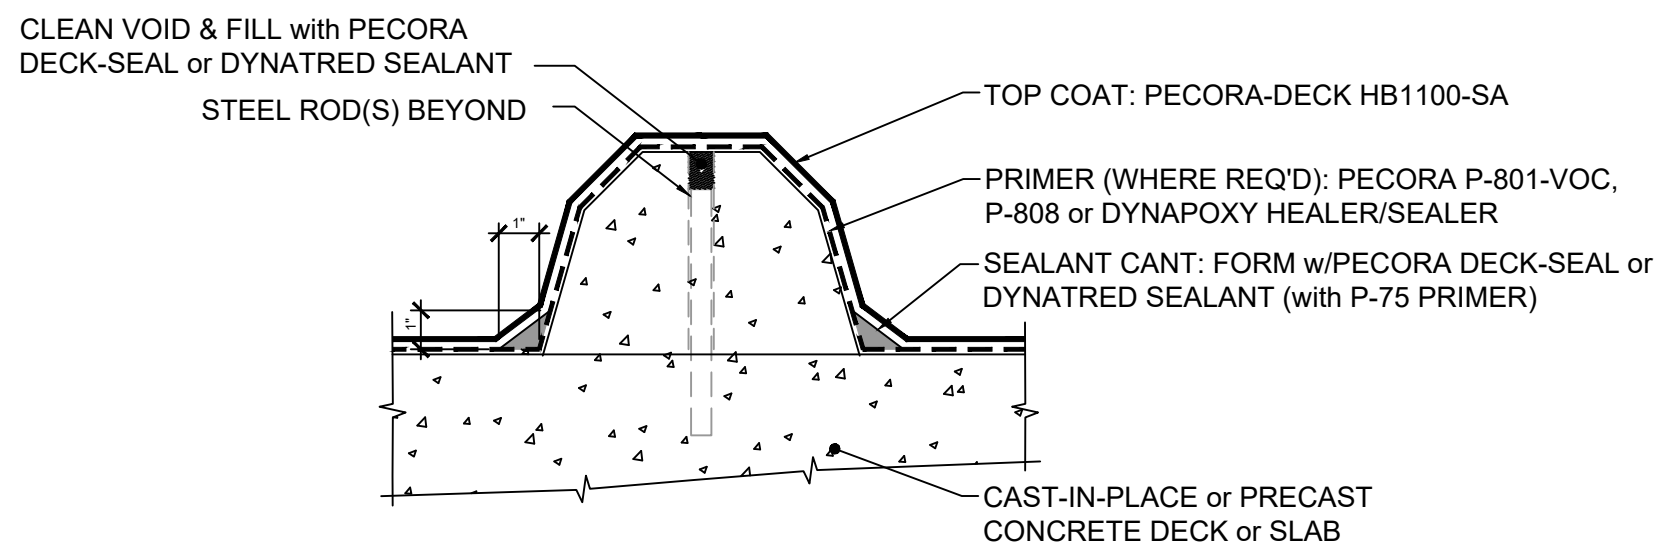


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

119: THICK-FLANGE DOUBLE TEE JOINT

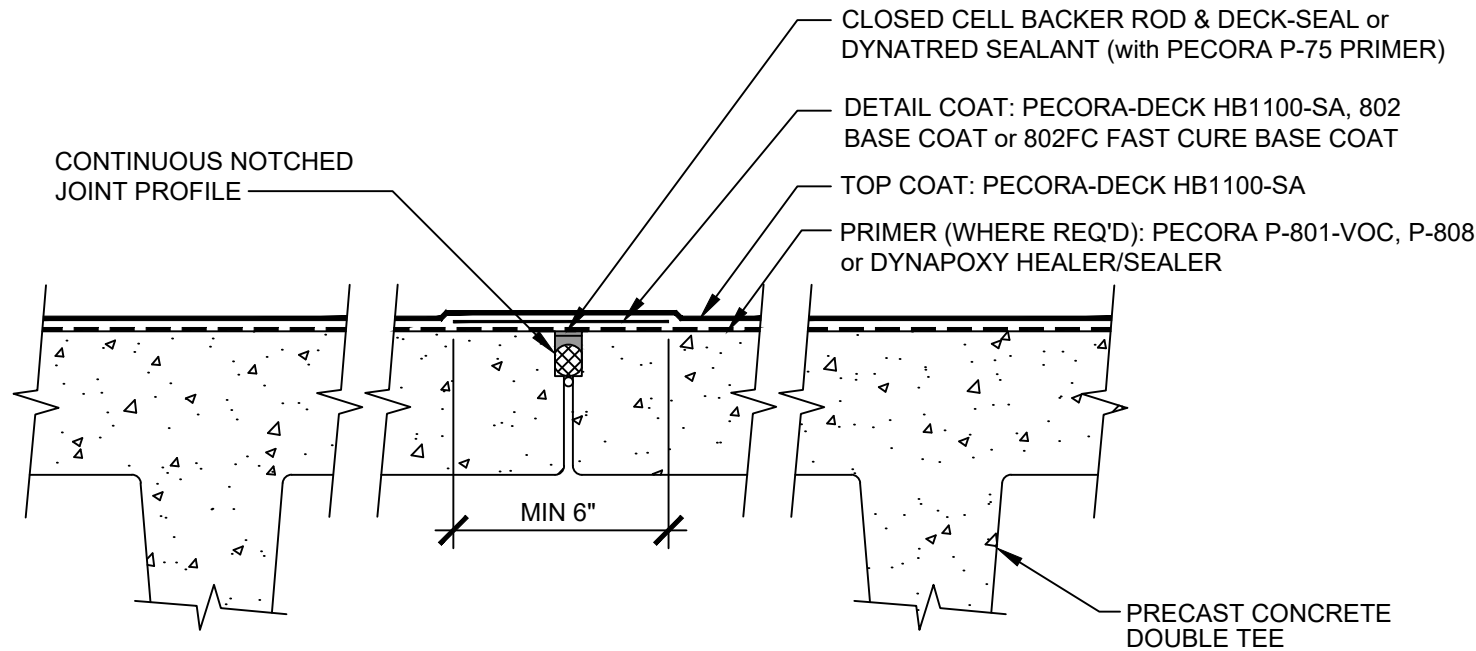


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

121: TOPPED THIN-FLANGE DOUBLE TEE JOINT

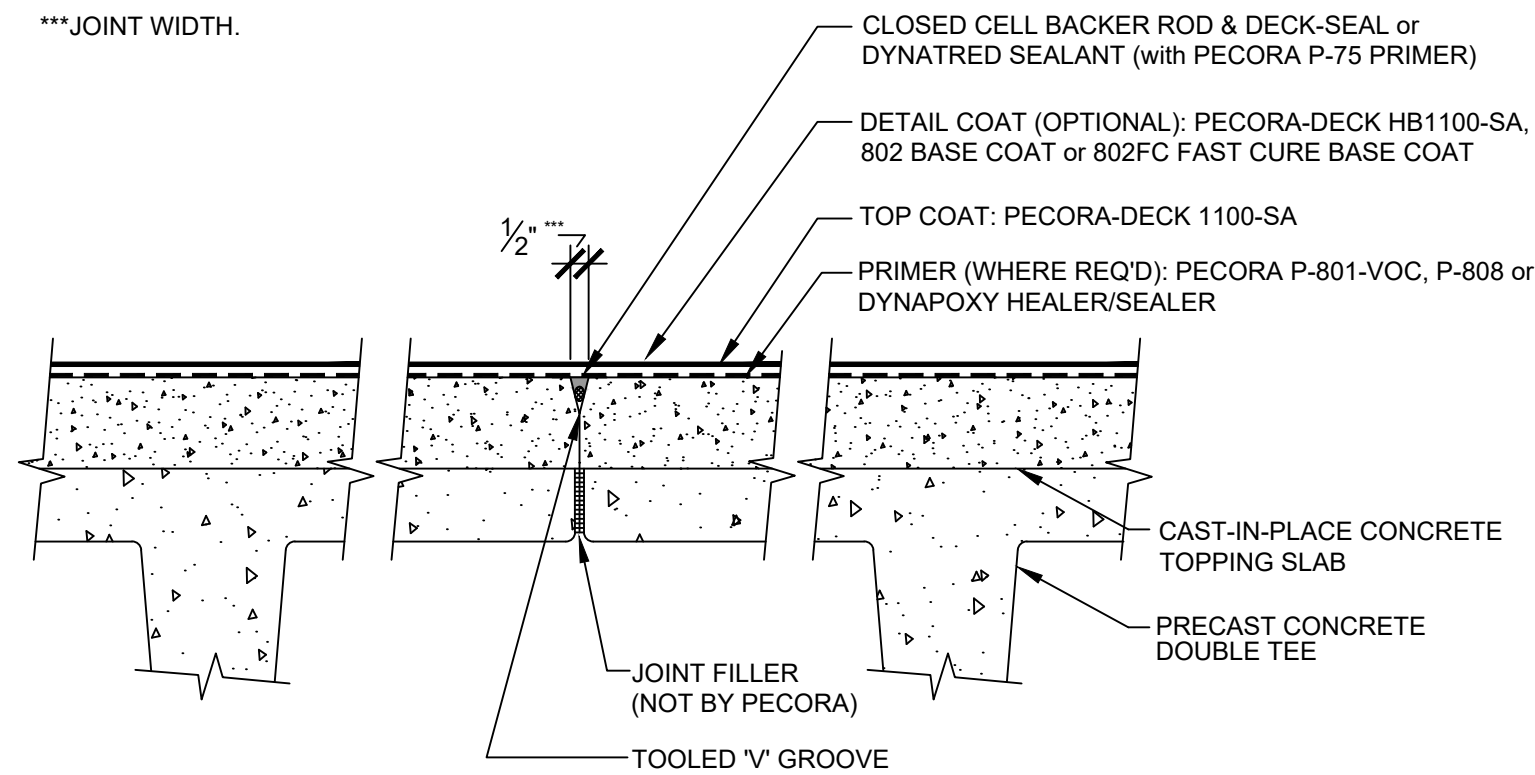

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

113: CURB OR STEPS AT WALL

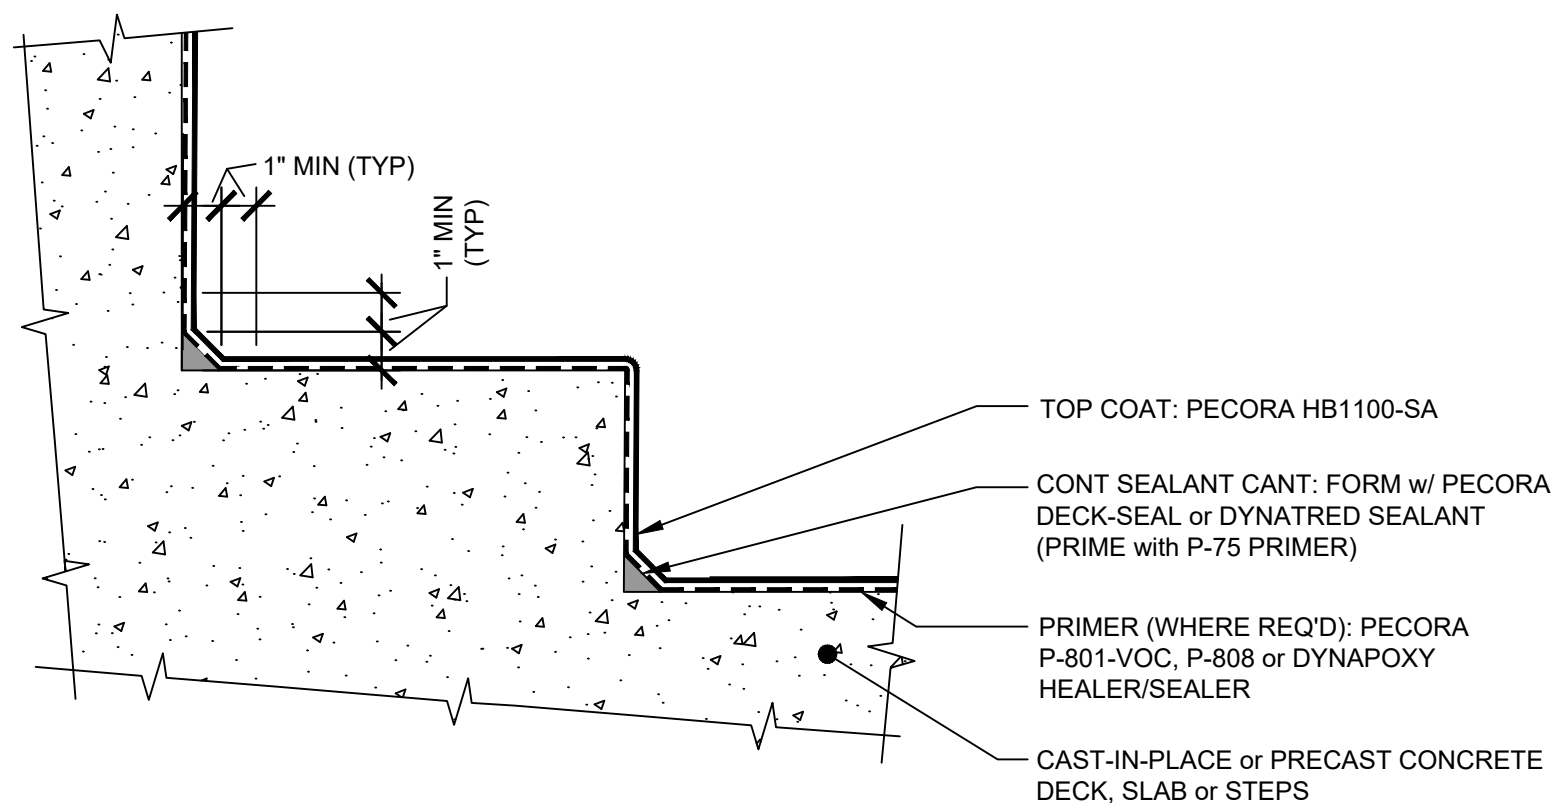

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

NOTE:
1. SEE HB1100SA TRAINING MANUAL for SYSTEM COAT & COATING THICKNESSES and INSTALLATION INSTRUCTIONS.