



106: SURFACE-MTD POST (POST INSTALLED FIRST)

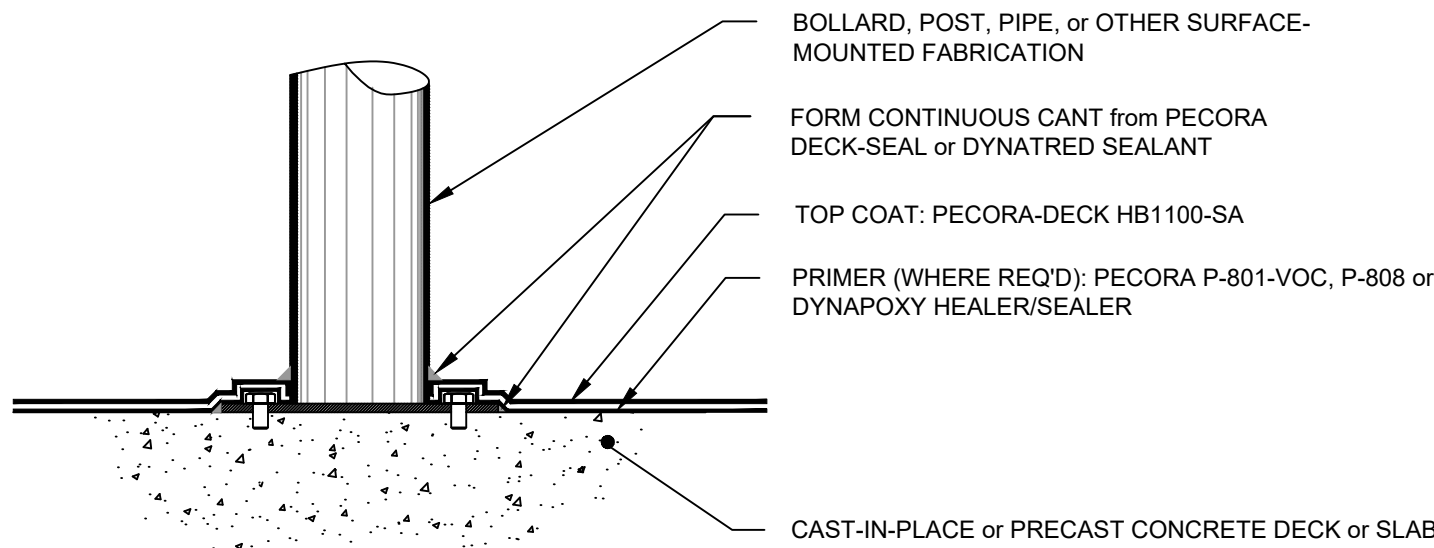


NOTES:
SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

107: FLOOR PENETRATION TREATMENT

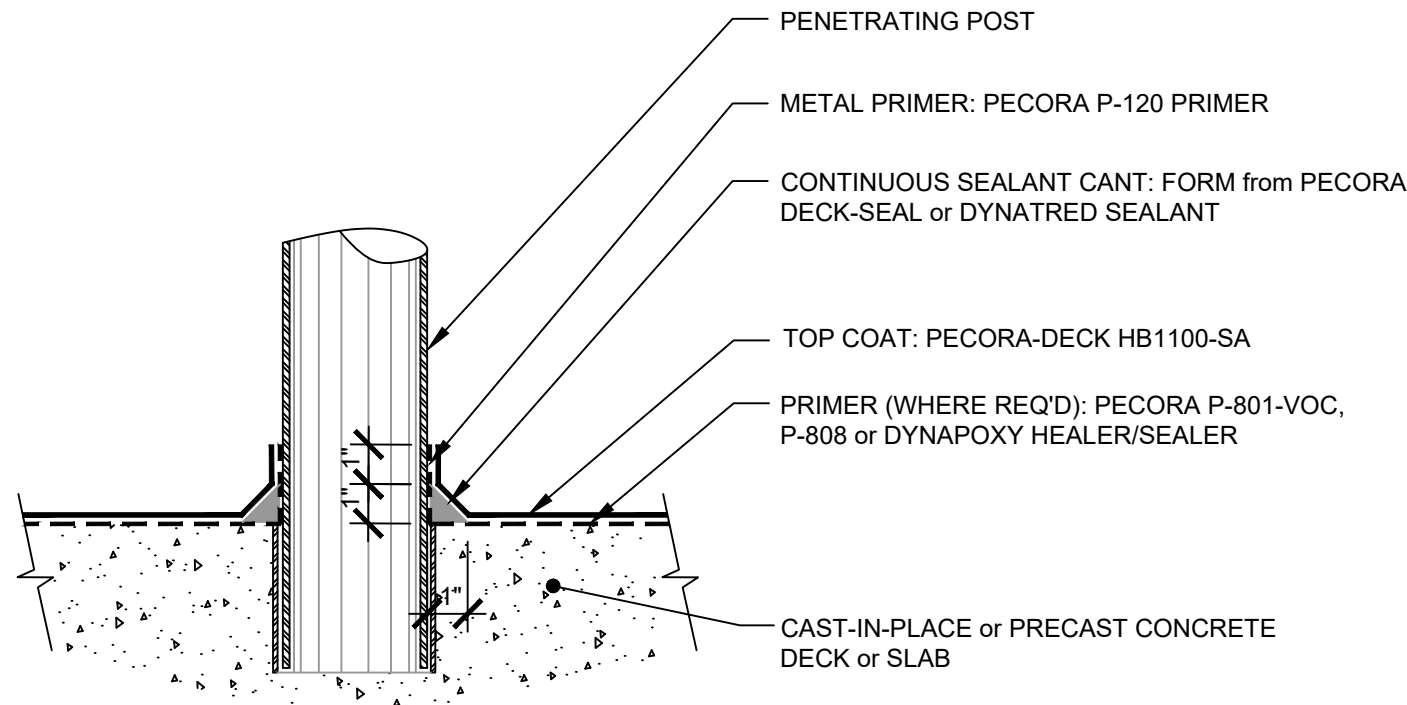


NOTES:
SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

109: APPLICATION AROUND DECK DRAIN

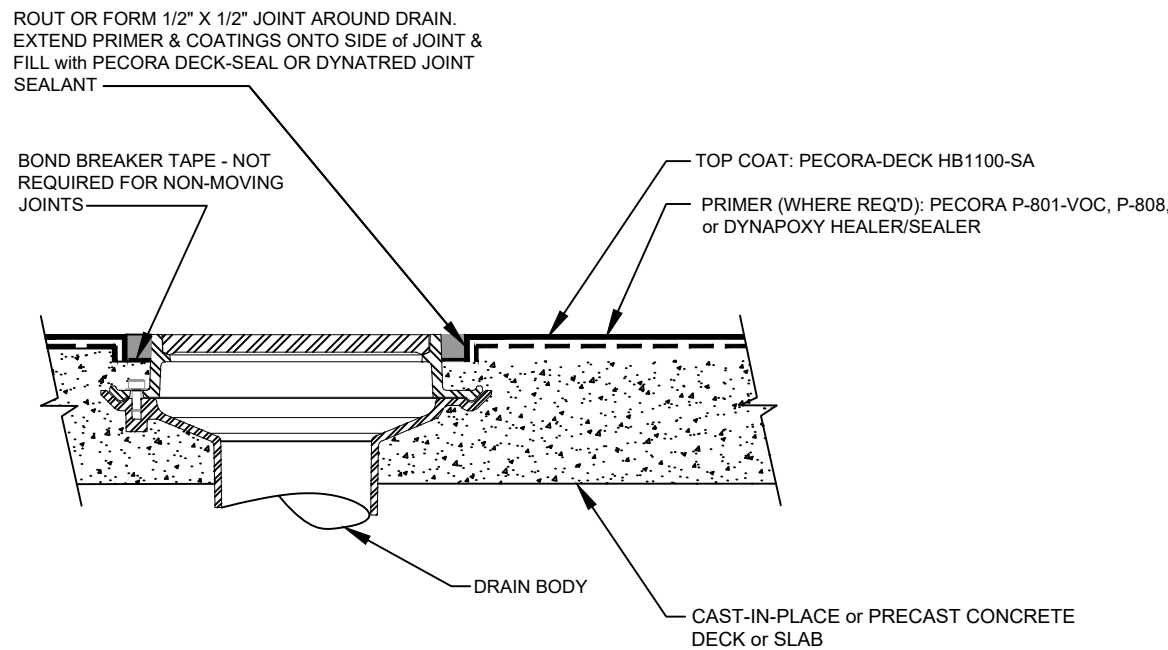


NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

106A: SURFACE-MTD. POST (COATING INSTALLED FIRST)

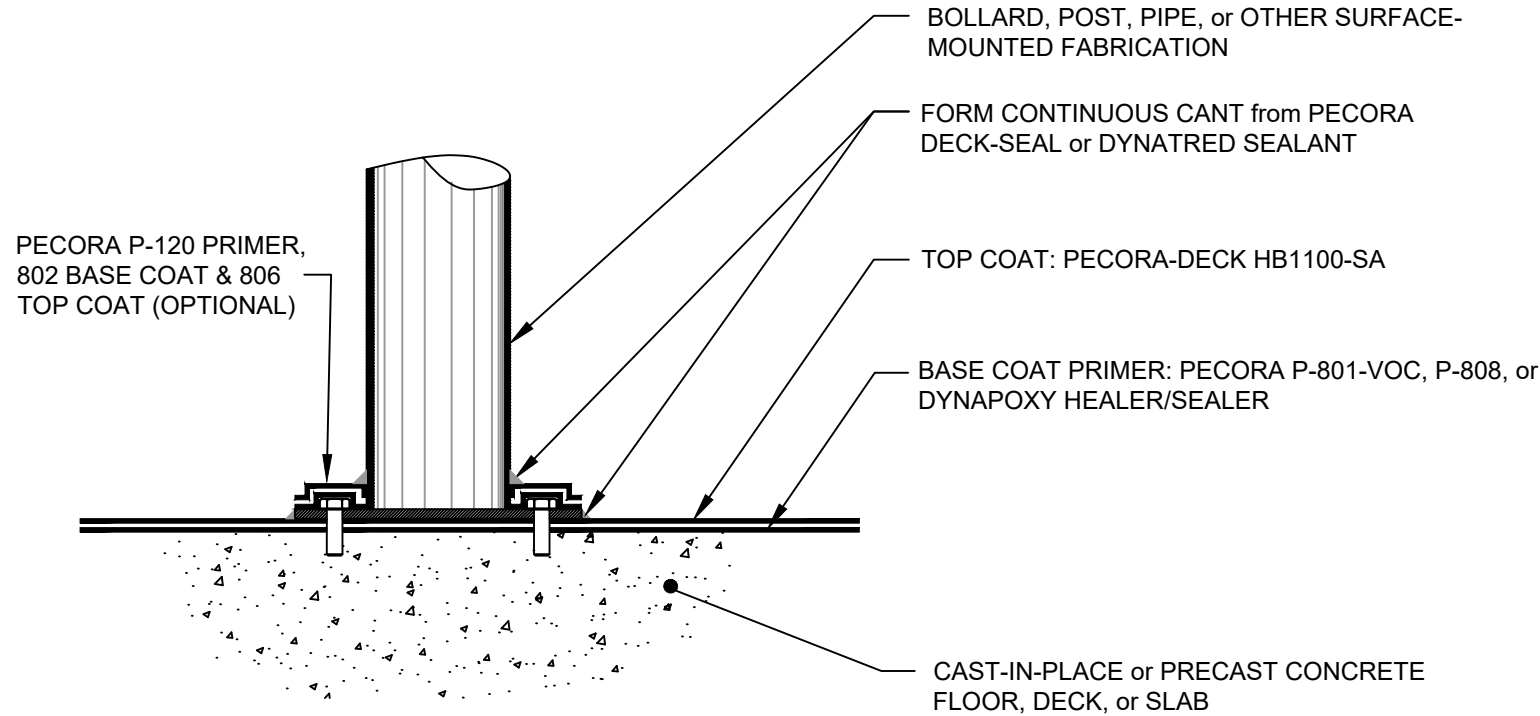


NOTES:
SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

108: APPLICATION INTO DECK DRAIN

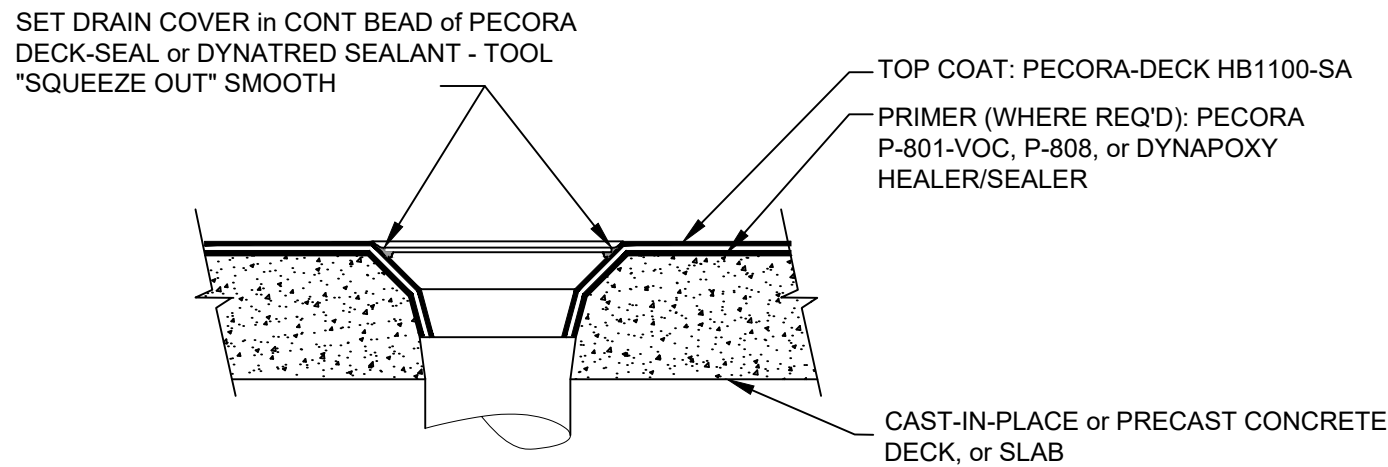

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.
- EXTEND COATINGS USING A BRUSH INTO DRAIN AS FAR AS NECESSARY TO LAP PERIMETER DRAIN COVER SEALANT MASK or COVER TO PREVENT COATING FROM CLOGGING DRAIN

110: NEW / RESET STONE & METAL THRESHOLDS

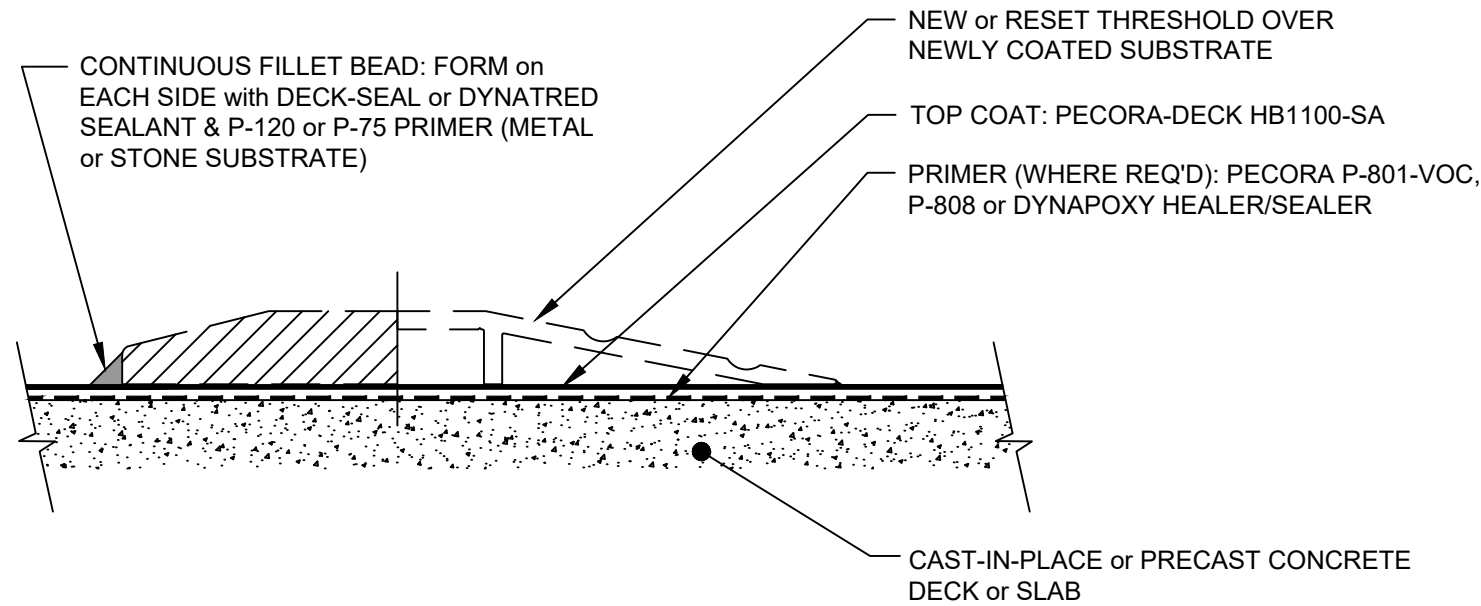

NOTES:
- SEE HB1100-SA APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

NOTE:
1. SEE HB1100SA TRAINING MANUAL for SYSTEM COAT & COATING THICKNESSES and INSTALLATION INSTRUCTIONS.