


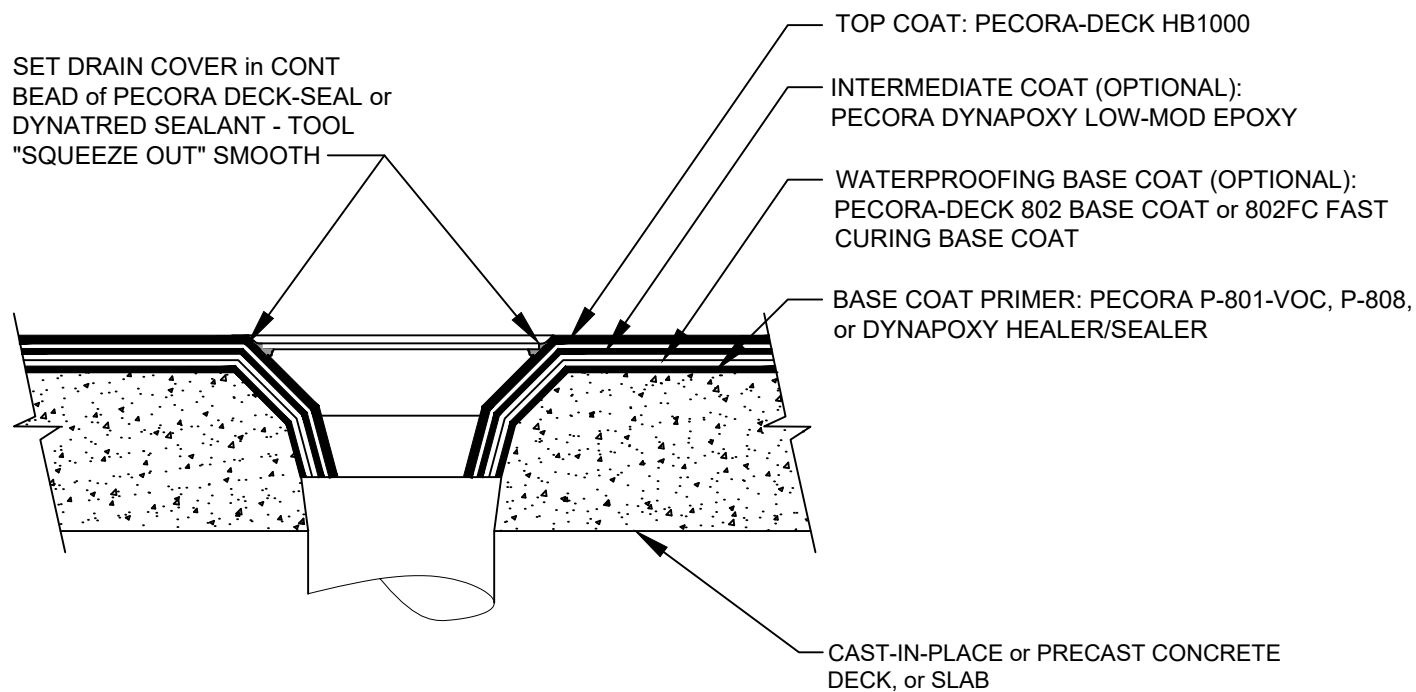

NOTES:

- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.
- EXTEND COATINGS USING A BRUSH INTO DRAIN AS FAR AS NECESSARY TO LAP PERIMETER DRAIN COVER SEALANT MASK or COVER TO PREVENT COATING FROM CLOGGING DRAIN