



118: THICK-FLANGED DOUBLE TEE EDGE

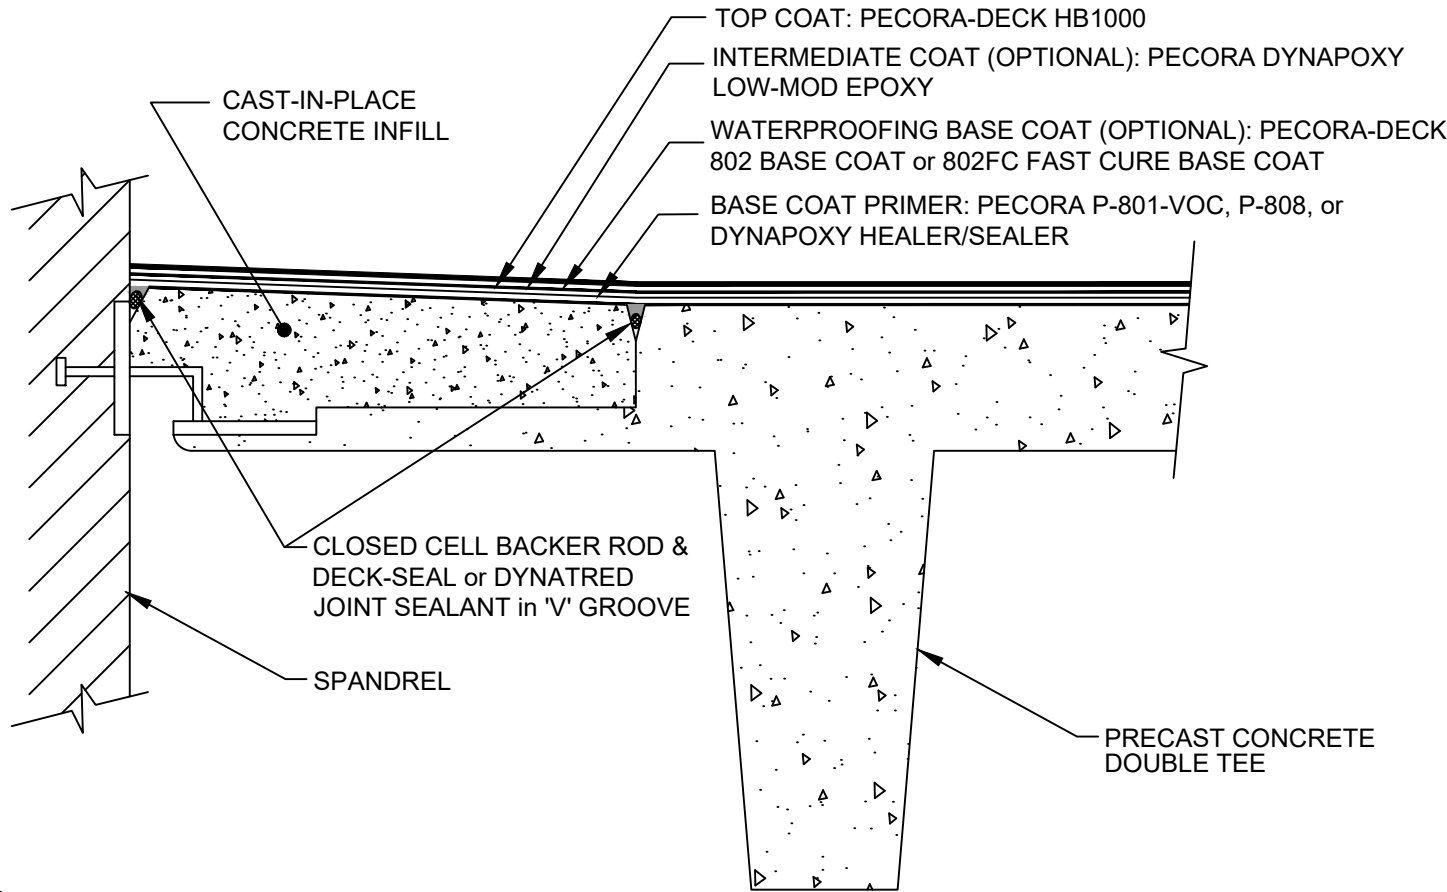


- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

120: TOPPED THIN-FLANGE DOUBLE TEE EDGE

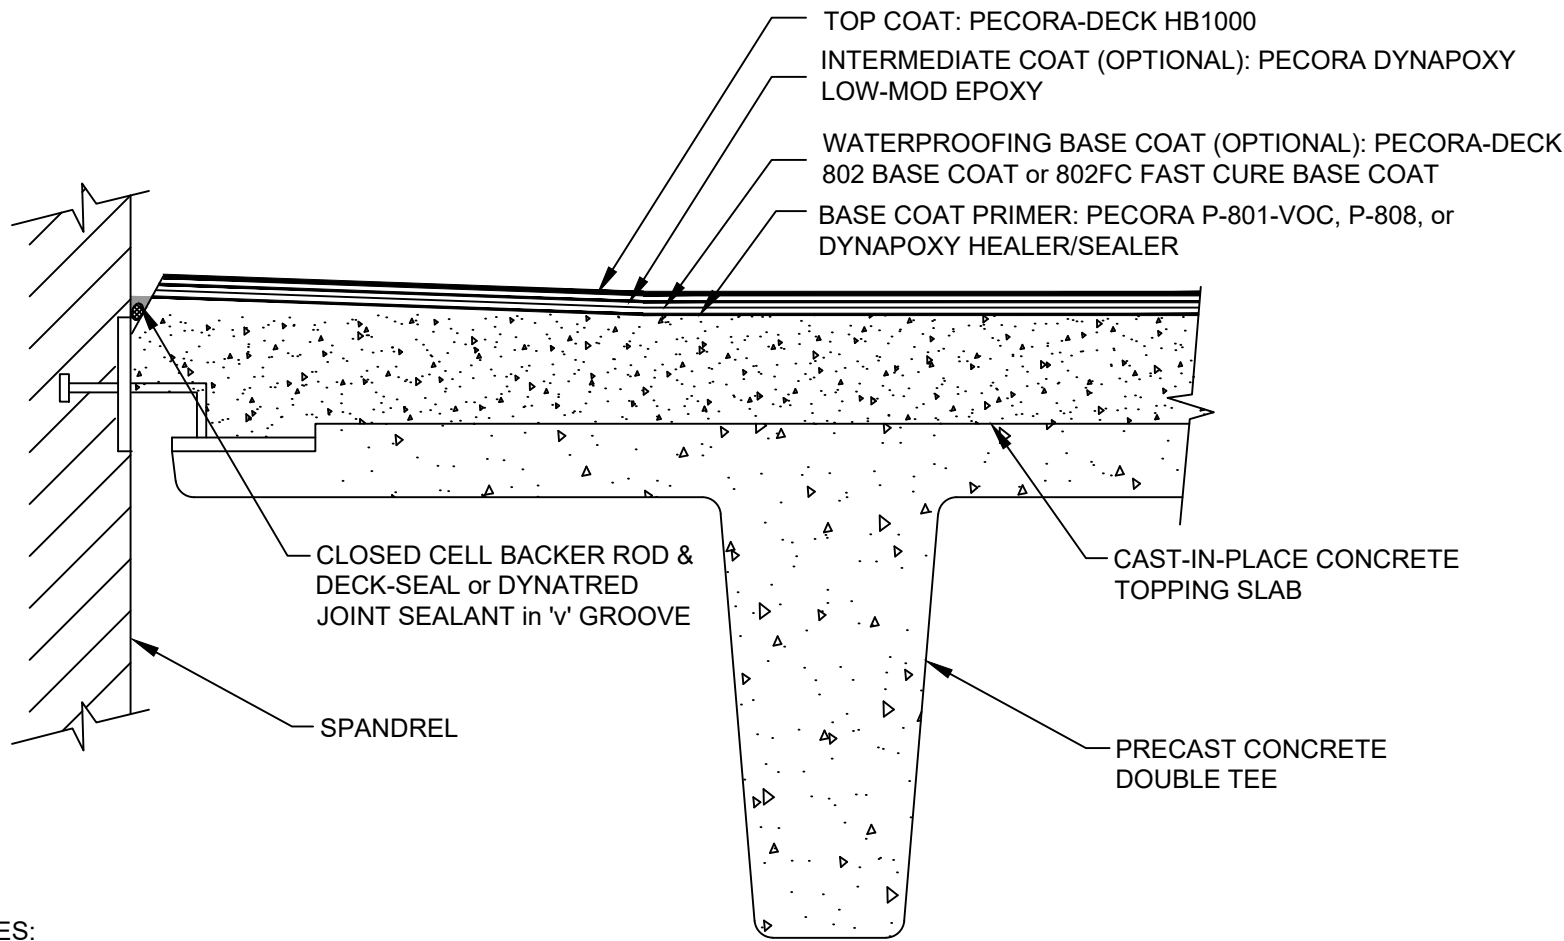


- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

112: PARKING BUMPER

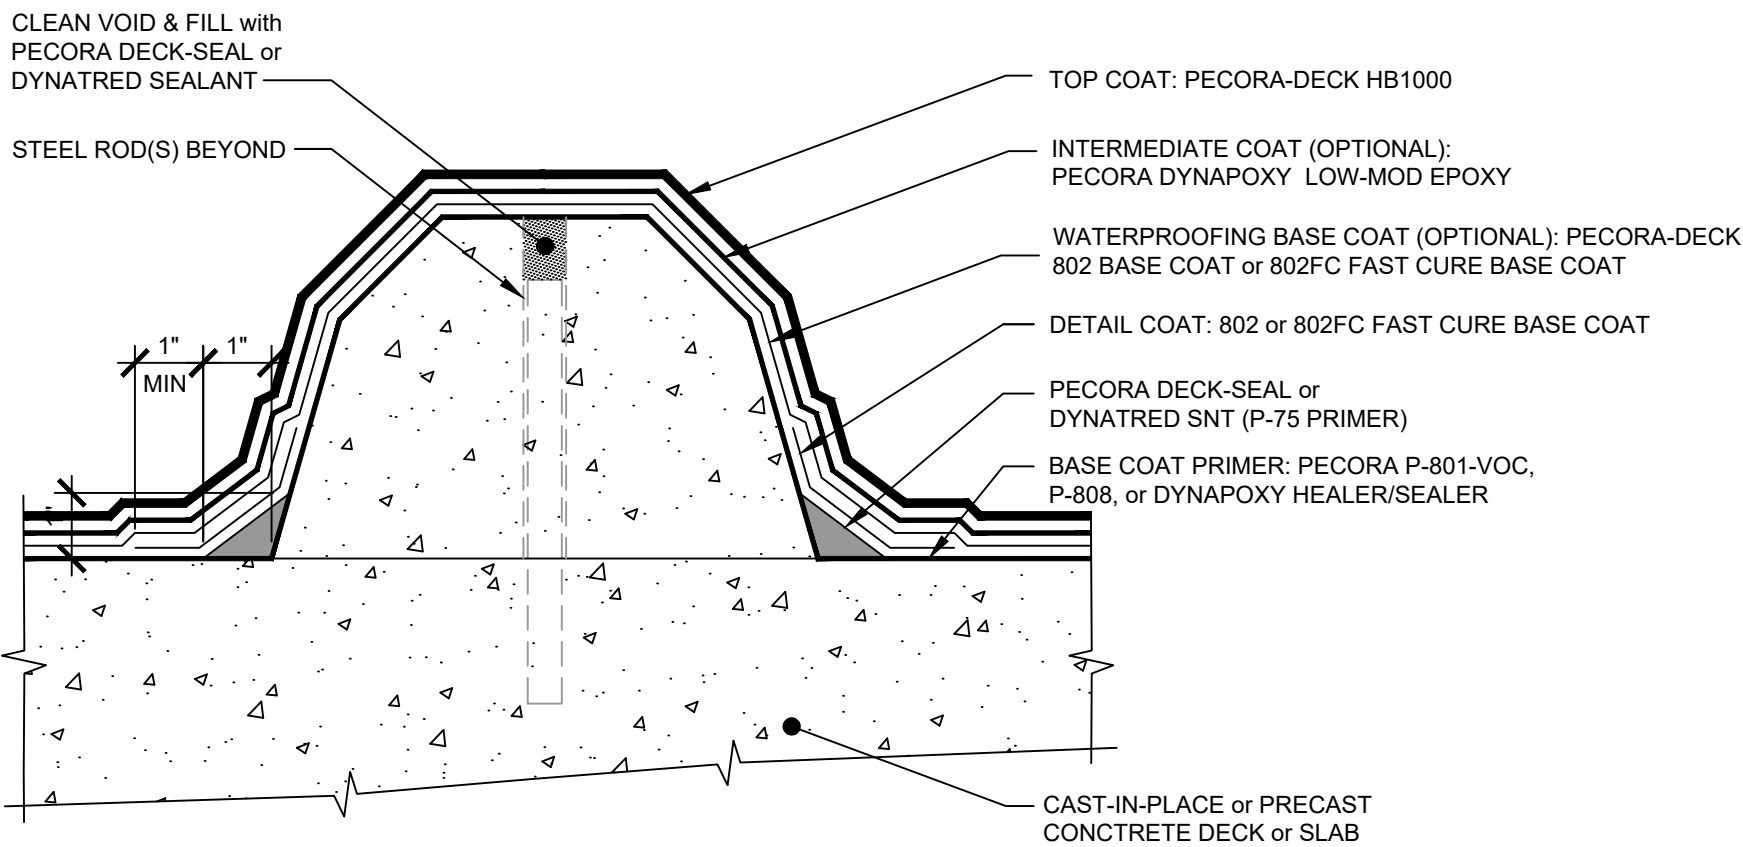


- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

119: THICK-FLANGE DOUBLE TEE JOINT

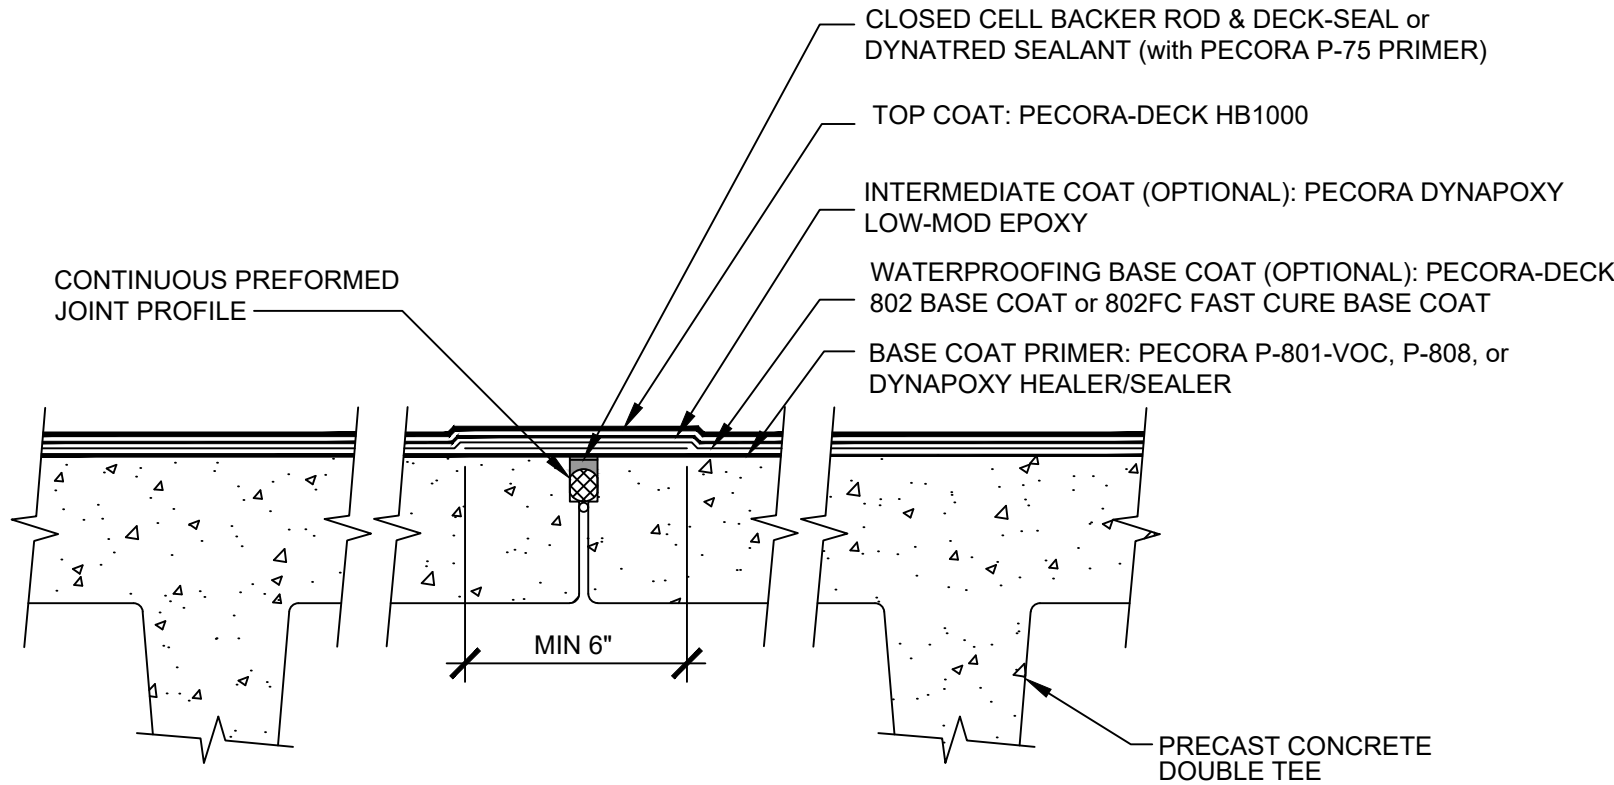


- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

121: TOPPED THIN-FLANGE DOUBLE TEE JOINT

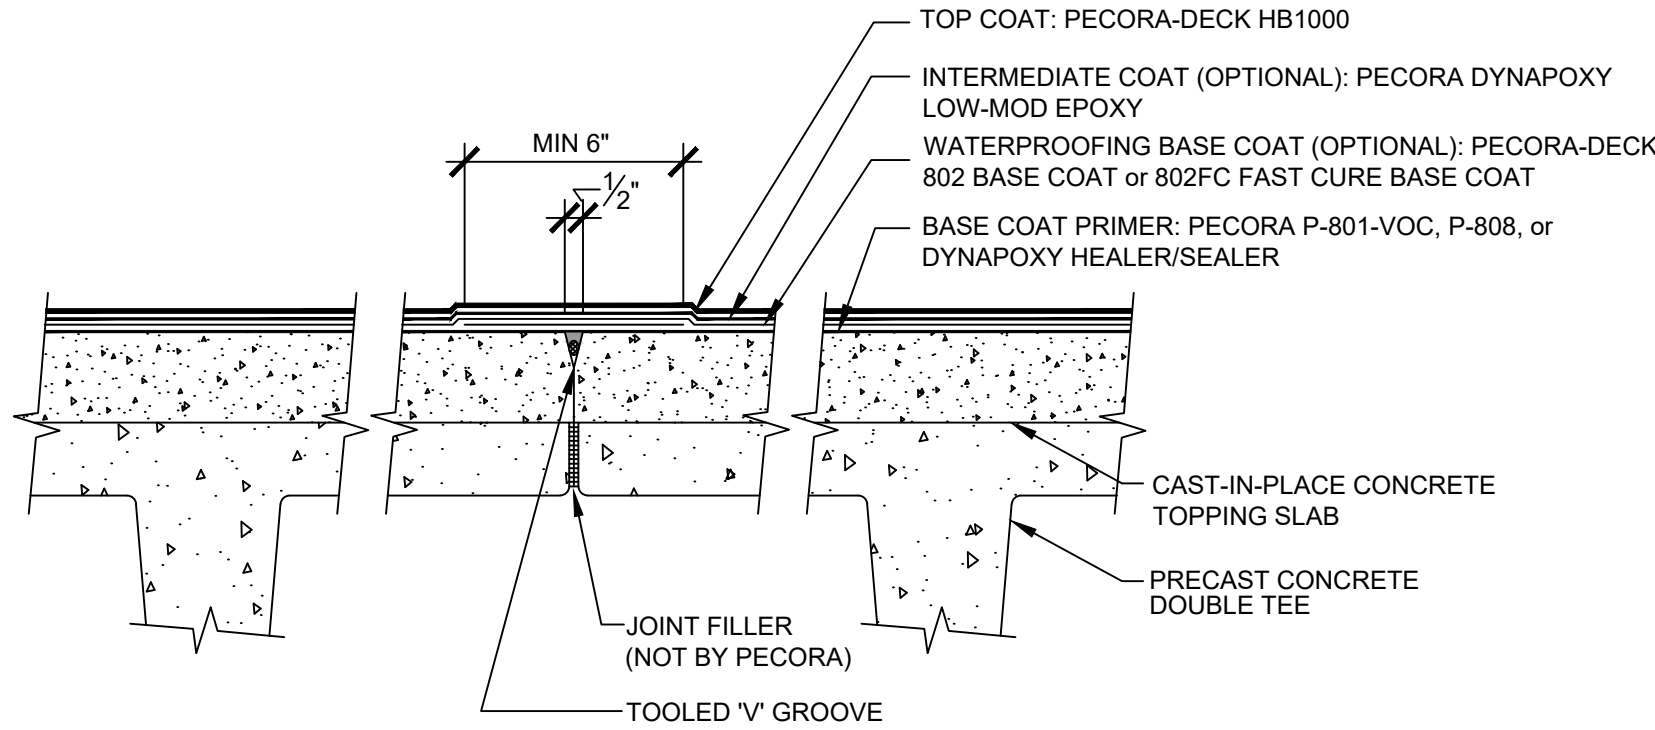

- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.
 - CLOSED CELL BACKER ROD & PECORA DECK-SEAL or DYNATRED JOINT SEALANT (P-75 PRIMER).

113: CURB OR STEPS AT WALL

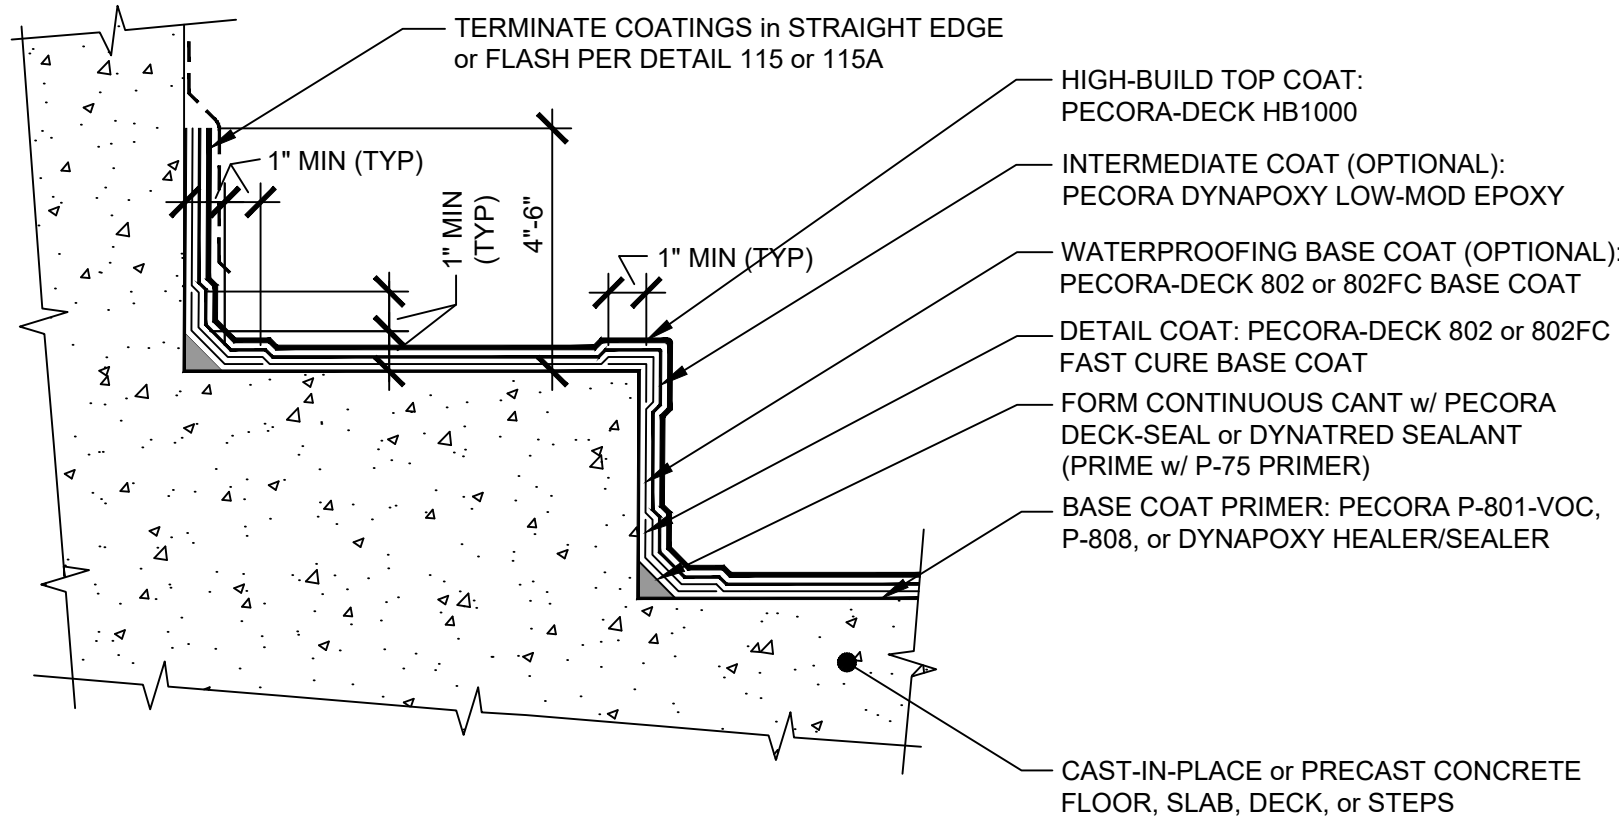

- NOTES:
- SEE HB1000 APPLICATION GUIDE for SYSTEM COAT and COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

NOTE:
1. SEE PECORA-DECK HB1000 APPLICATION MANUAL for SYSTEM COATS, COATING THICKNESSES & AGGREGATE SIZES AND INSTALLATION INSTRUCTIONS.