



118: THICK-FLANGE DOUBLE TEE EDGE

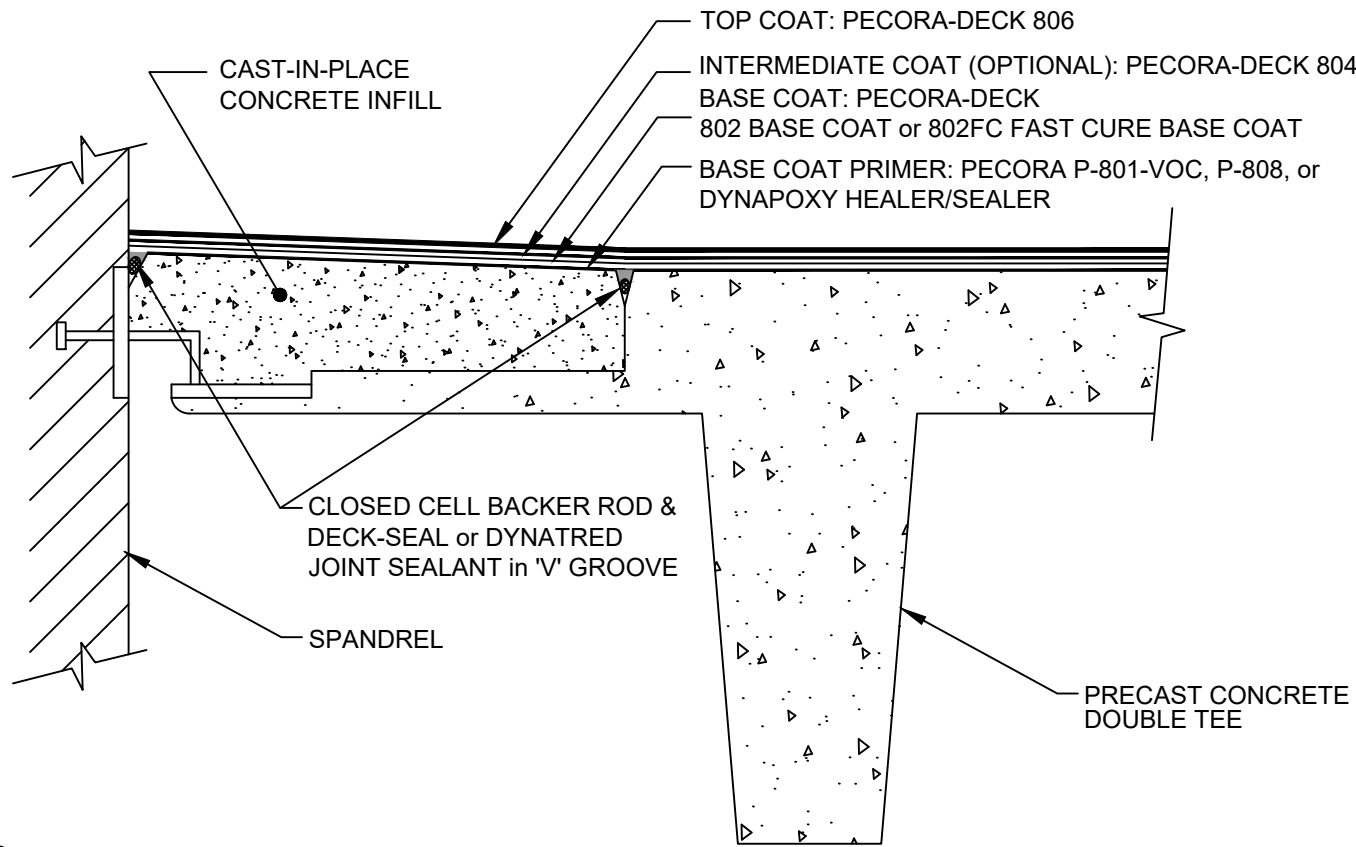


- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

120: TOPPED THIN-FLANGE DOUBLE TEE EDGE

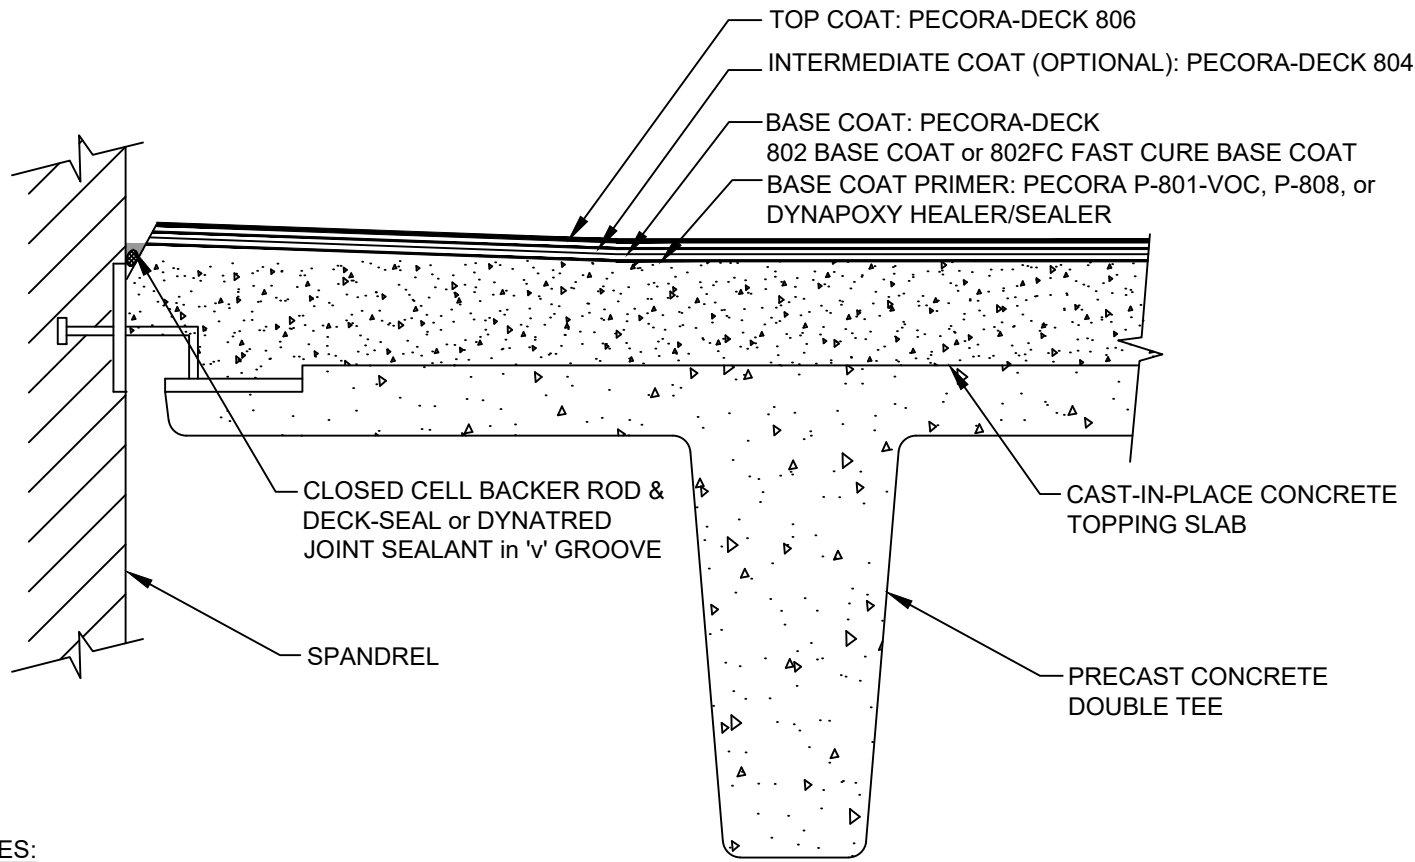


- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

112: PARKING BUMPER

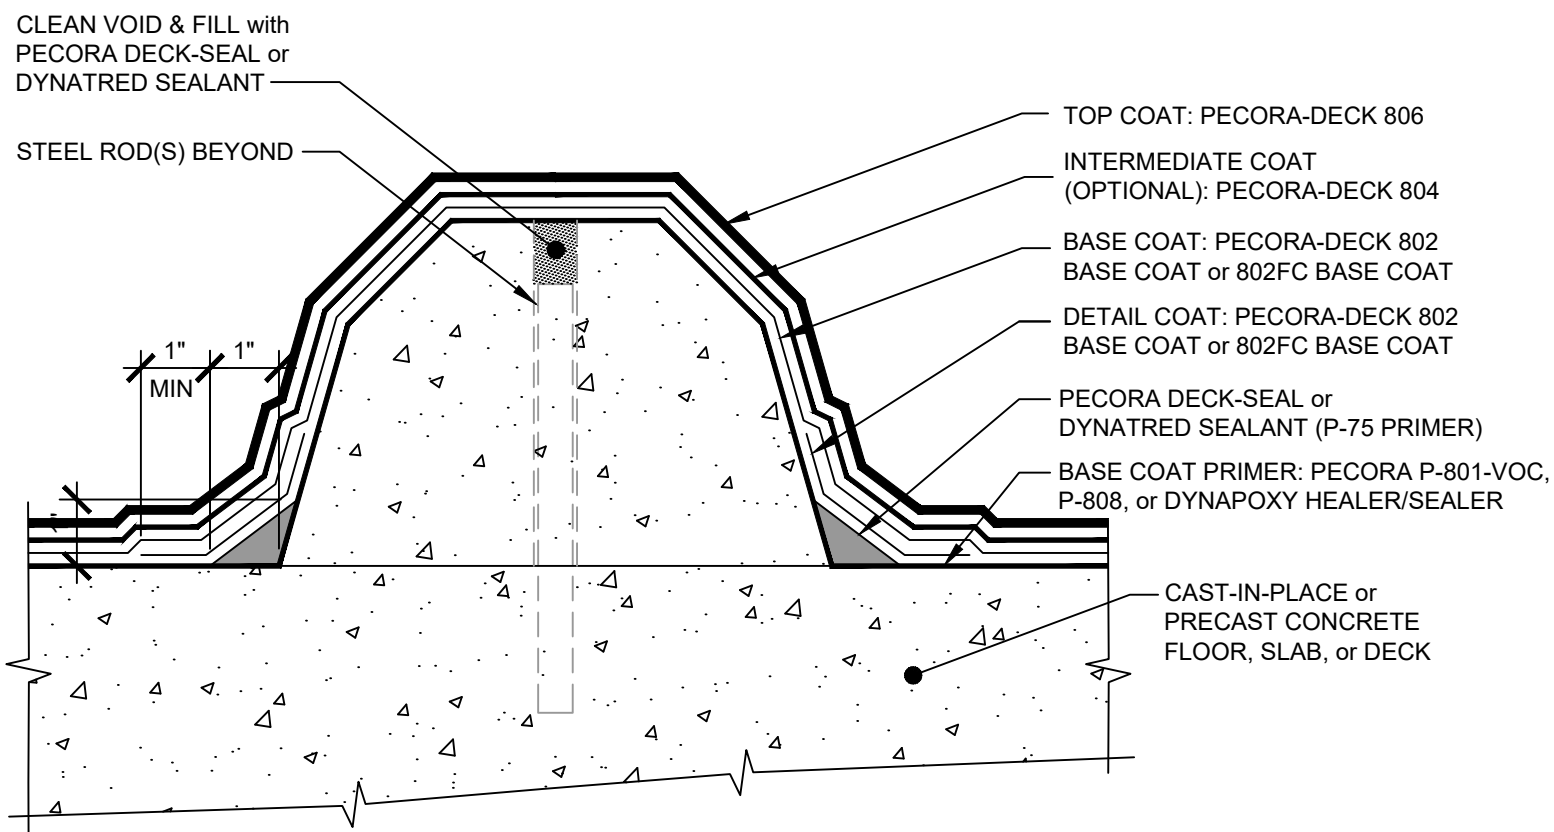


- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

119: THICK-FLANGE DOUBLE TEE JOINT

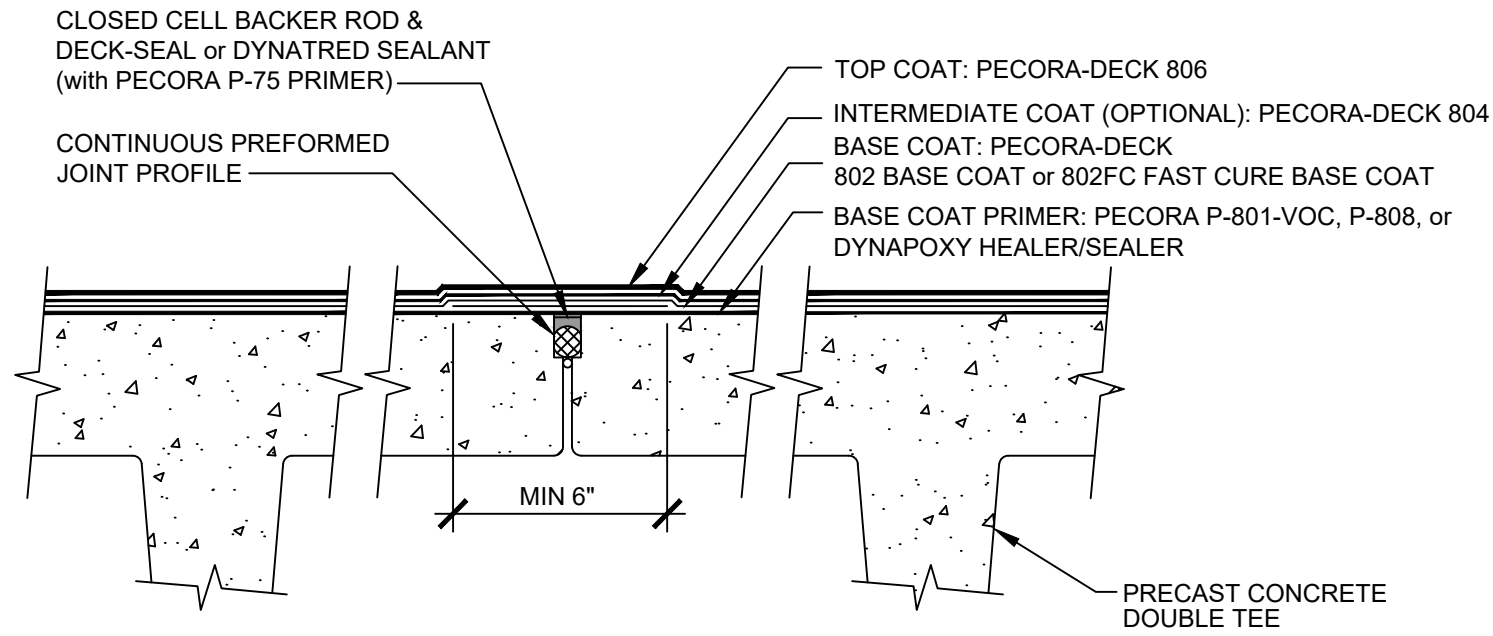


- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

121: TOPPED THIN-FLANGE DOUBLE TEE JOINT

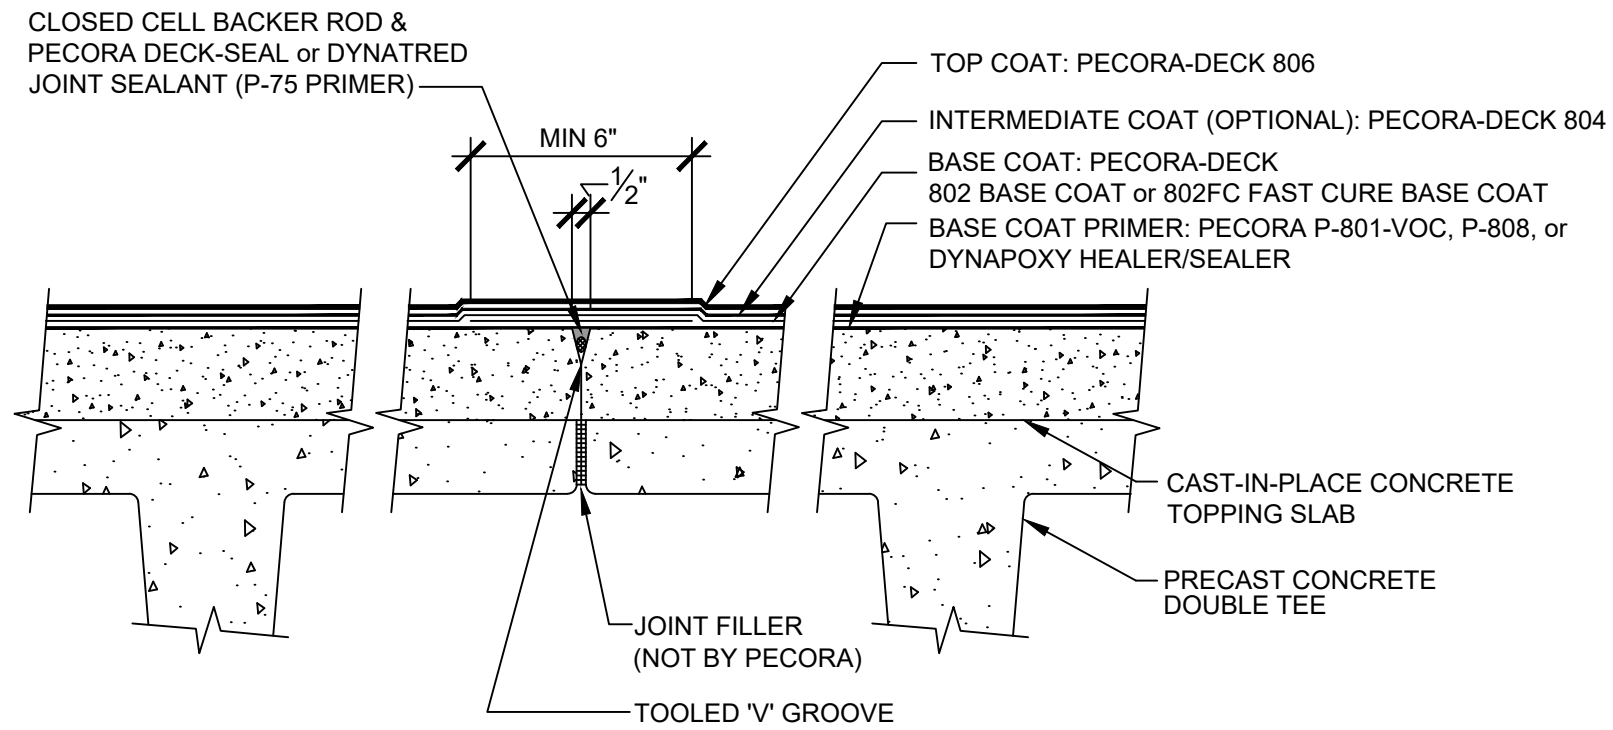

- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.

113: CURB OR STEPS AT WALL

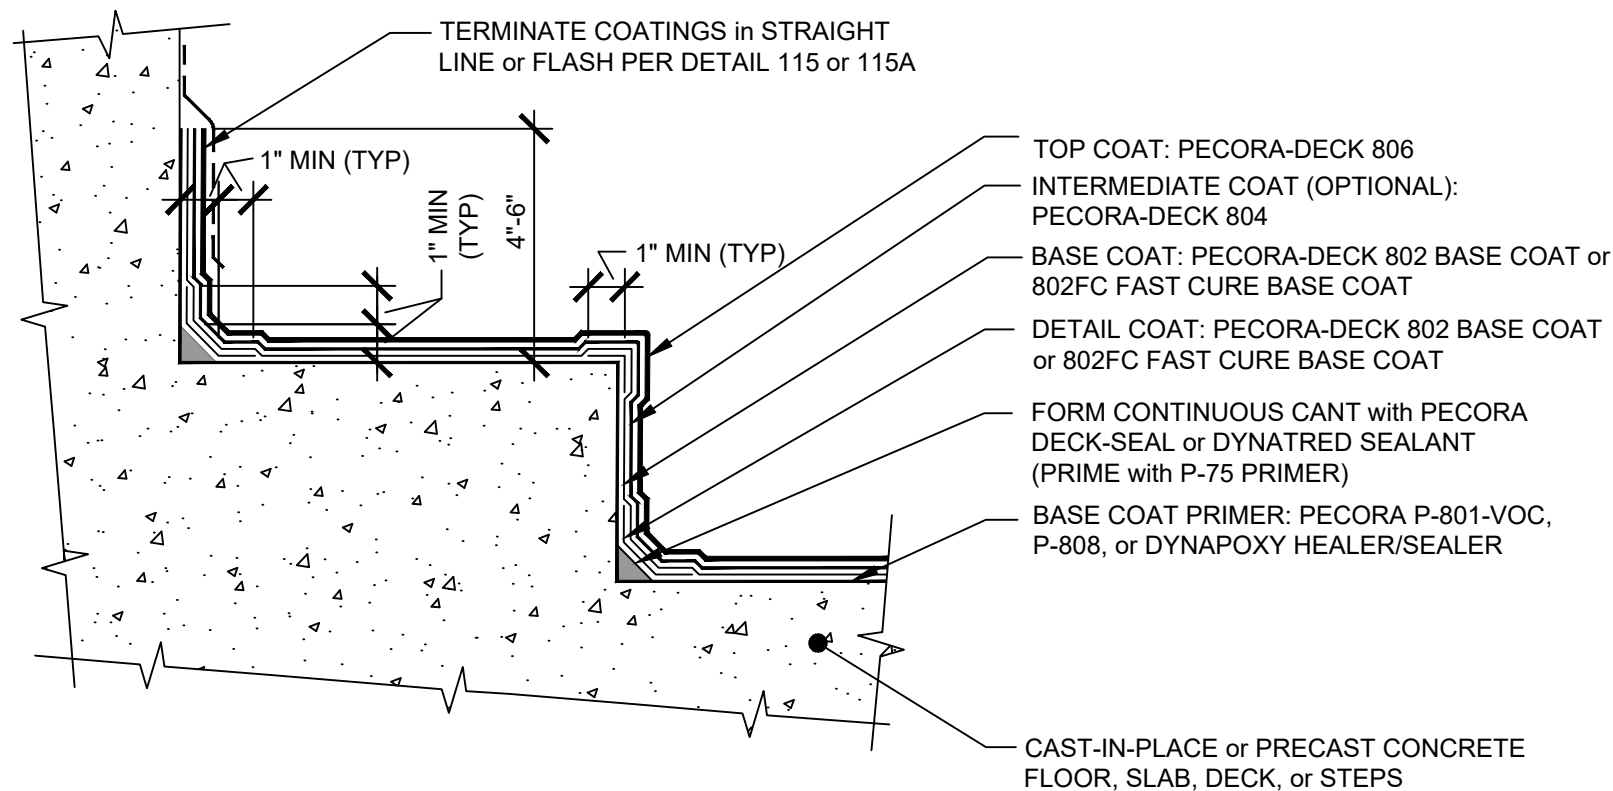

- NOTES:
- SEE PECORA DECK 800 SERIES APPLICATION GUIDE for SYSTEM COAT, COATING THICKNESSES and INSTALLATION INSTRUCTIONS.
 - OMIT AGGREGATE fr. VERTICAL SURFACES.

NOTE:

1. SEE PECORA-DECK 800 SERIES APPLICATION MANUAL for SYSTEM COATS, COATING THICKNESSES & AGGREGATE SIZES AND INSTALLATION INSTRUCTIONS.